 


# SPAREPARTS CATALOGUE

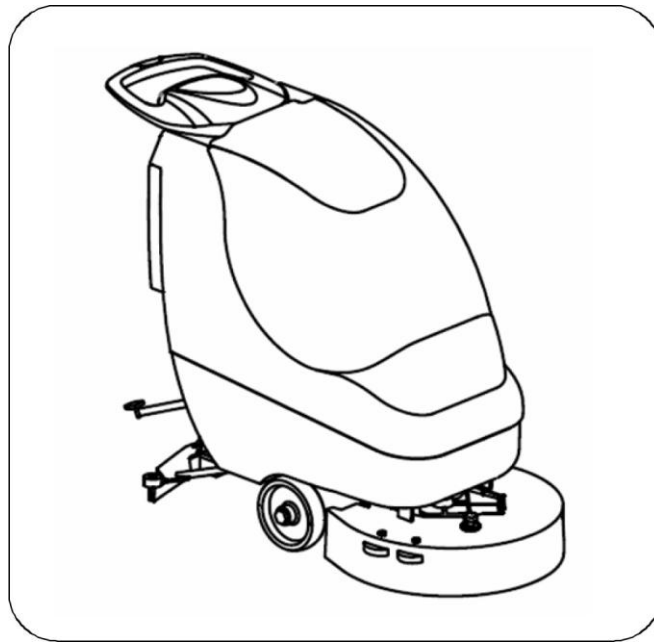


KEDI GBZ-430B

KEDI GBZ-520B

KEDI GBZ-530B


BZT001

 GBZ-530B

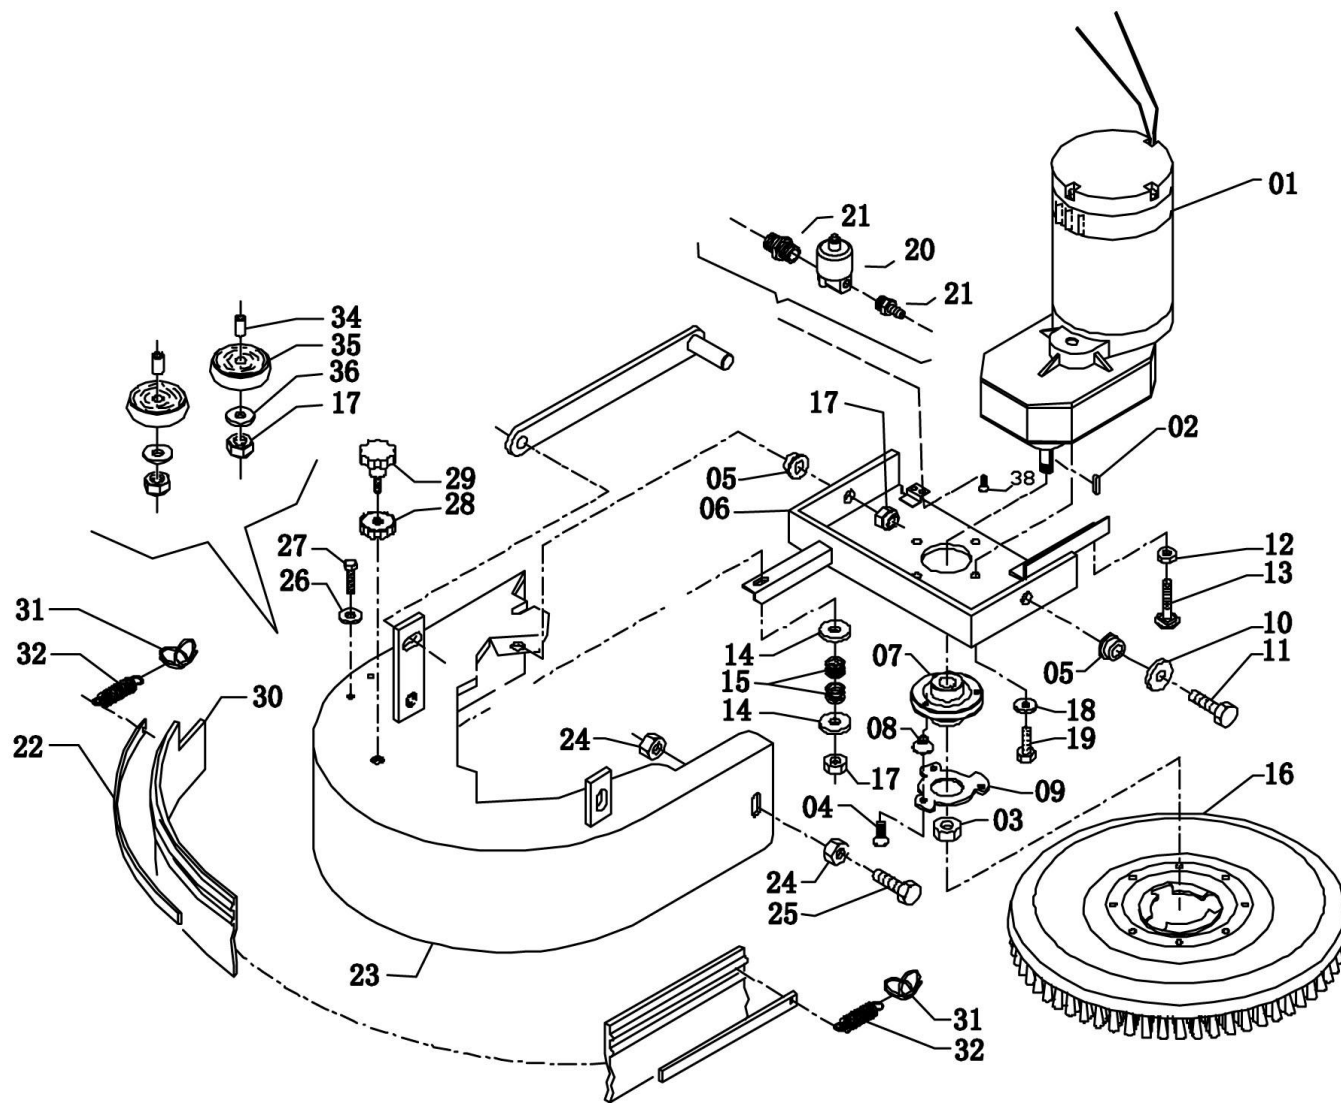


35	GB/T 95-2002	washer	2
34	530B-V04	wheel	2
33	530B-BR03	bushing	2
32	530B-MZ23	spring	2
31	530B-MZ22	ring	2
30	530B-P03	splash guard	1
29	530B-P38	knob	1
28	530B-P27	handwheel	1
27	GB/T 5781-2000	screw	2
26	GB/T 95-2002	washer	2
25	GB/T 5781-2000	screw	2
24	GB/T 6177,1-2000	nut	4
23	530B-M801	support	1
22	530B-ST05	stainless blade	1
21	530B-BR09	connector	2
20	530B-C16	solenoid valve	1
19	GB/T 5781-2000	screw	4
18	GB/T 95-2002	washer	4
17	GB/T 928-1980	nut	5
16	530B-T6	brush	1
15	530B-MZ24	spring	2
14	GB/T 95-2002	washer	15
13	GB/T 12-1988	screw	1
12	GB/T41-2000	nut	1
11	GB/T 5781-2000	screw	2
10	GB/T 95-2002	washer	2
9	530B-MZ04	flange	1
8	530B-MZ05	spacer	3
7	530B-MZ03	flywheel	1
6	530B-M901	motor base	1
5	530B-BR05	bushing	2
4	GB/T 70.3-2000	screw	3
3	GB6170-2000	nut	1
2	GB/T 1096-2003	key	1
1	530B-E01-1	brush motor	1

 BZT002

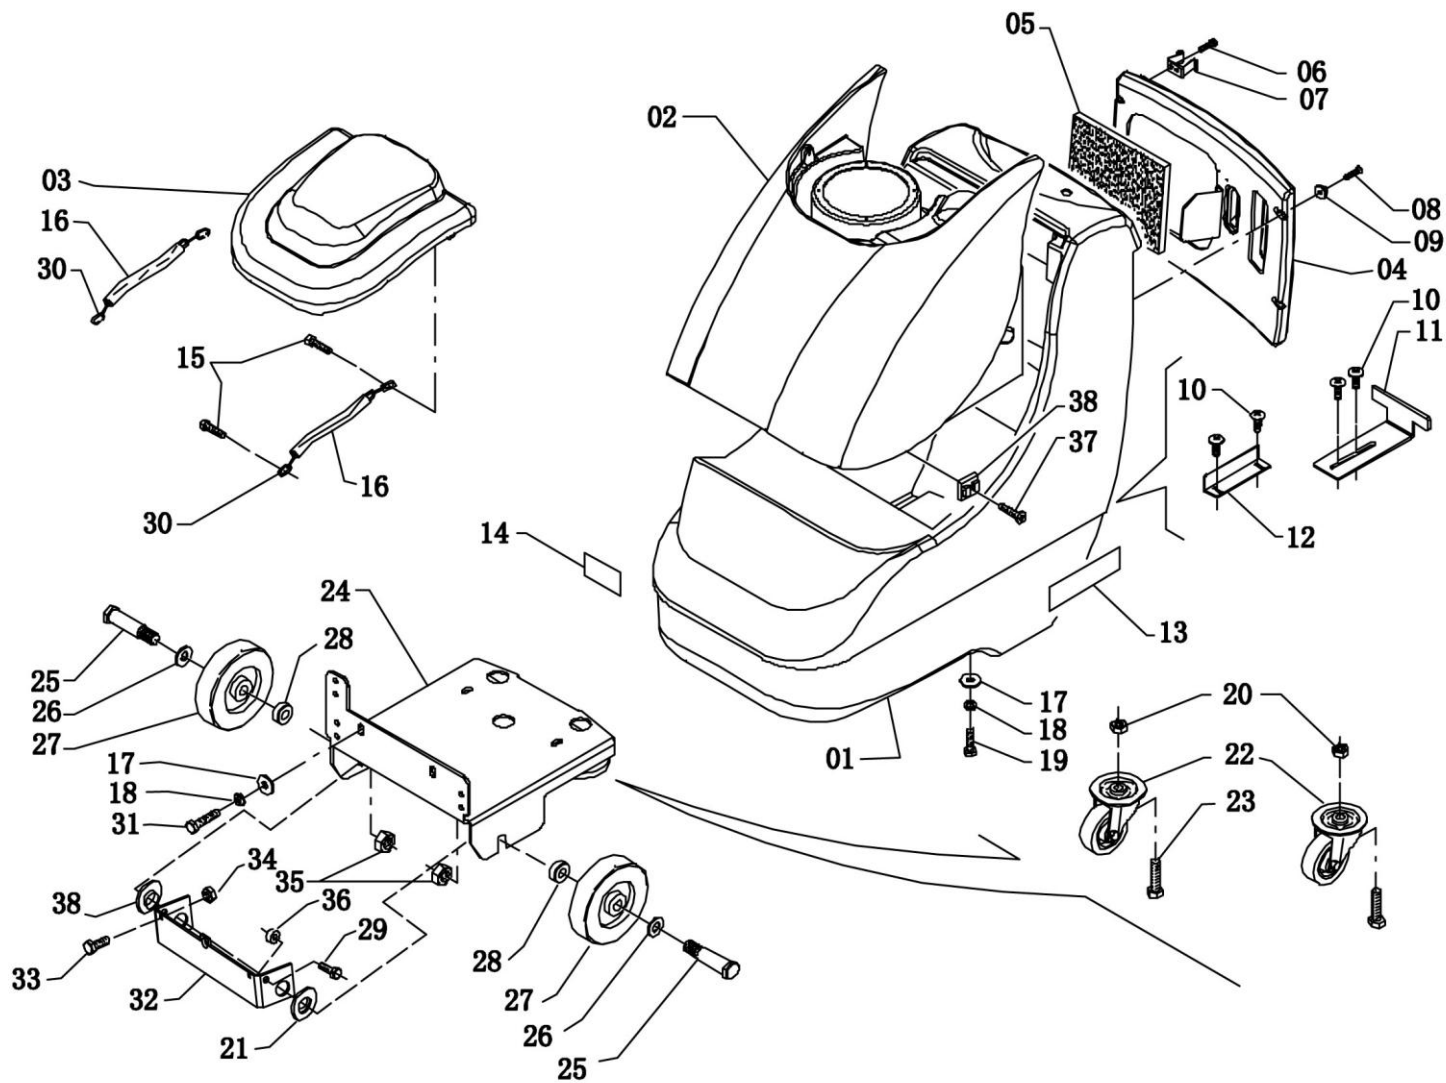


38	530B-P44	cable trough	4
37	GB/T 846-1985	screw	5
36	GB/T 928-1980	nut	2
35		nut	2
34	GB/T 928-1980	nut	4
	GB/T 12-1988	screw	2
32	530B-M90	support	1
31	GB/T 5781-2000	screw	2
30	530B-MZ30	chain	2
29	GB/T 5781-2000	screw	2
28	530B-MZ17	spacer	2
27	530B-V01	wheel	2
26	GB/T 95-2002	washer	2
25	530B-MZ16	anchor bolts	2
24	530B-M902	base frame	1
23	GB/T 5781-2000	screw	2
22	530B-W02	caster wheel	2
21	530B-M902-9	bushing	2
20	GB/T 928-1980	nut	2
19	GB/T 5781-2000	screw	2
18	GB/T 95-2002	washer	4
17	GB/T 95-2002	washer	4
16	530B-P54	sheatn tube	2
15		screw	4
14	530B-S5	frong label	1
13	530B-S2/S3	side label	2
12	530B-ST03	side stopper	1
11	530B-ST02	rear stopper	1
10		screw	4
9	530B-P17	plastic washer	4
8	GB/T 845-1985	screw	4
7	530B-P09	hook	1
6	GB/T 845-1985	screw	2
5	530B-P53	sponge	1
4	530B-T4	solution cover	1
3	530B-T3	recovery cover	1
2	530B-T2	recovery tank	i
1	530B-T1	solution tank	1

 BZT003

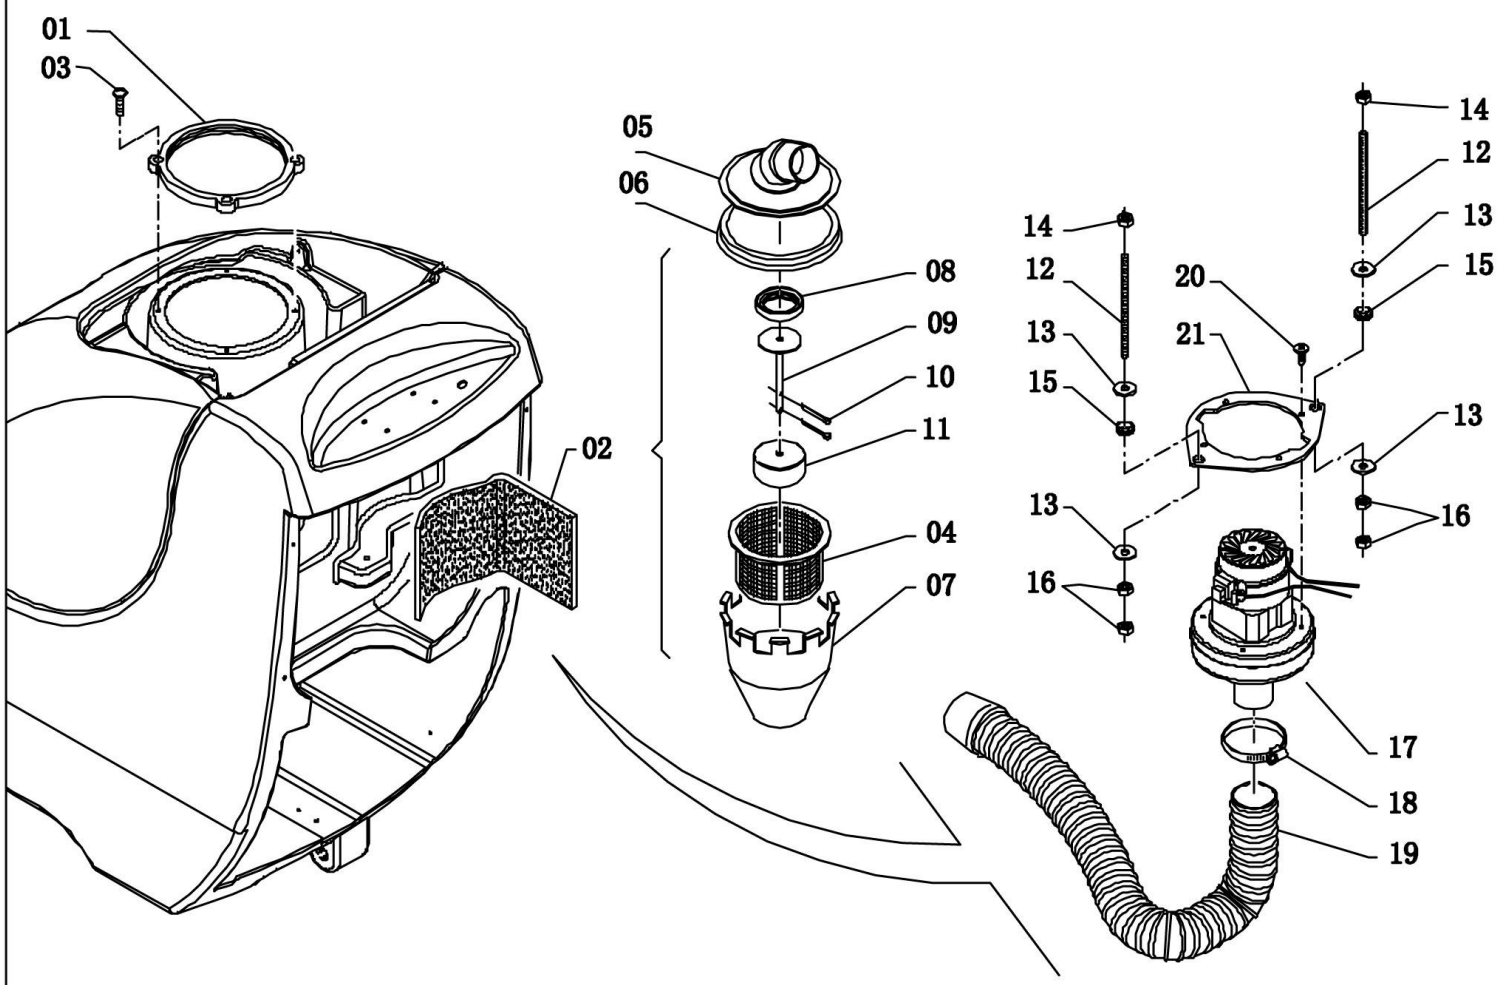


20	GB/T 846-1985	screw	4
19	530B-P49	suction hose	1
18		clamp	2
17	530B-E02	vacuum motor	1
16	GB/T 6172.1-2000	nut	4
15	530B-P55	fairlead	2
14	GB/T 928-1980	nut	2
13	GB/T 95-2002	washer	4
12	GB/T 12869-1991	screw	2
11	530B-P31	float	1
10	GB/T 91-2000	pin	2
9	530B-ST04	support	1
8	530B-P14	gasket	1
7	530B-P11	filter guard	1
6	530B-P13	rubber gasket	1
5	530B-P16	filter cover	1
4	530B-P10	filter	1
3	GB/T 846-1985	screw	4
2	530B-P52	sponge	1
1	530B-P12	filter support	1

 BZT004

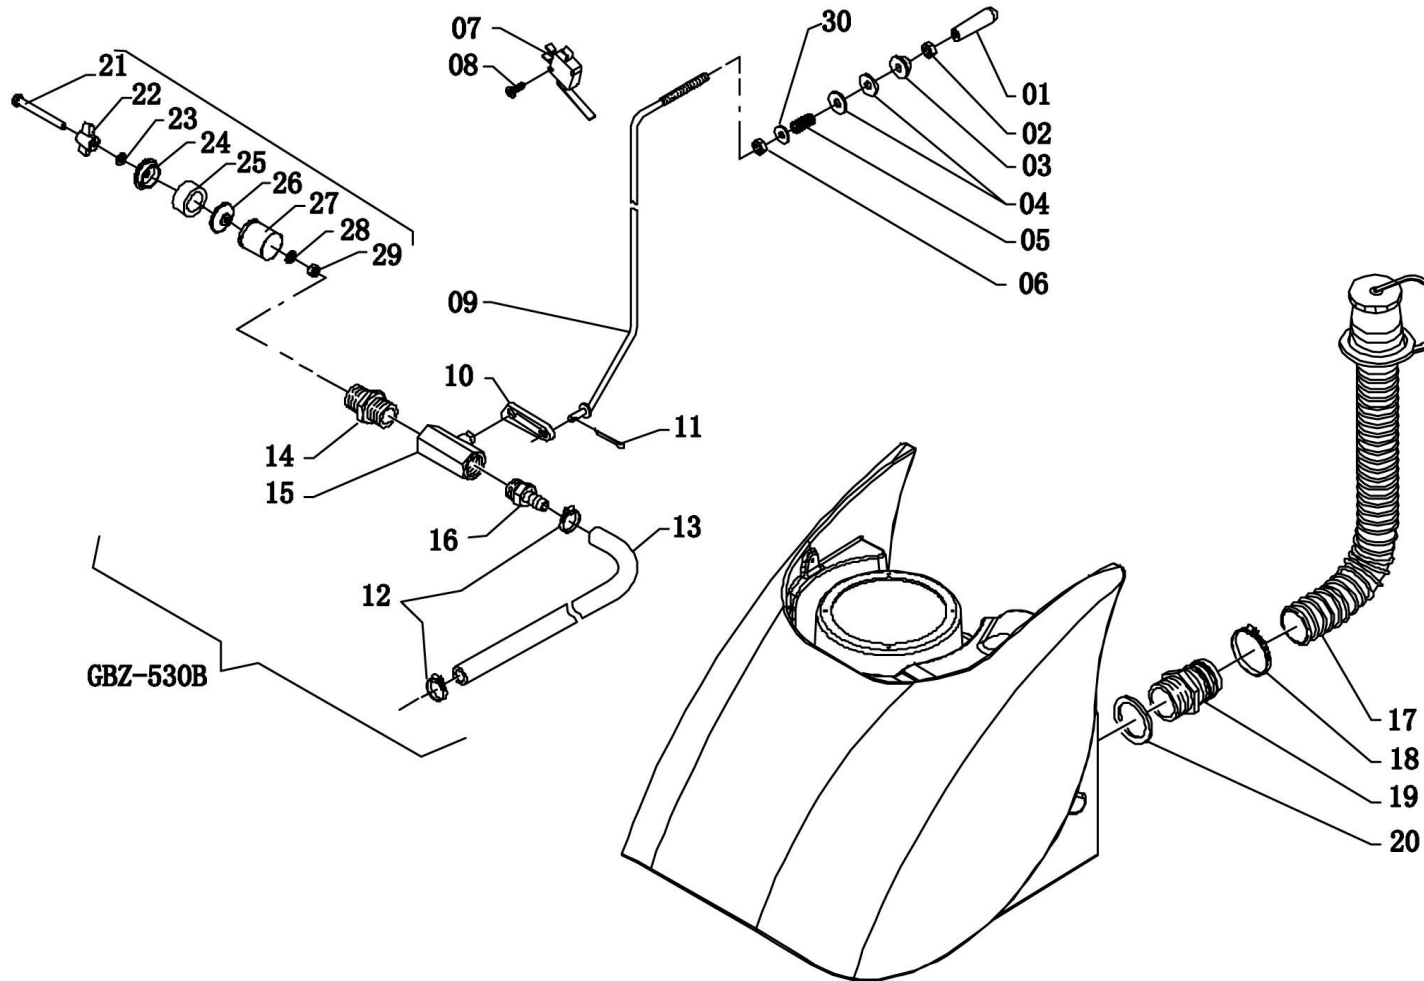


30	GB/T 95-2002	washer	1
29	GB/T 928-1980	nut	1
28	GB/T 95-2002	washer	1
27	530B-ST06	filter	1
26	530B-P08	filter support	1
25	530B-P07	rubber ring	1
24	530B-P06	plug	1
23	GB/T 95-2002	washer	1
22	530B-P51	wing nut	1
21	GB/T 5781-2000	screw	1
20	530B-P37	gasket	1
19	530B-P36	connector	1
18		clamp	2
17	530B-P02	exhaust pipe	1
16	530B-BR07	connector	1
15	530B-BR08	valve	1
14	530B-BR06	connector	1
13	530B-T8	hose	1
12		clamp	2
11	GB/T 91-2000	pin	1
10	530B-P20	valve lever	1
9	530B-MZ06	rod	1
8	GB/T 845-1985	screw	2
7	530B-C15	microswitch	1
6	GB/T 6177.1-200C	nut	1
5	530B-MZ24	spring	1
4	530B-P43	nylon washer	2
3	530B-P17	plastic washer	1
2	GB/T41-2000	nut	1
1	530B-P35	knob	1

 BZT005

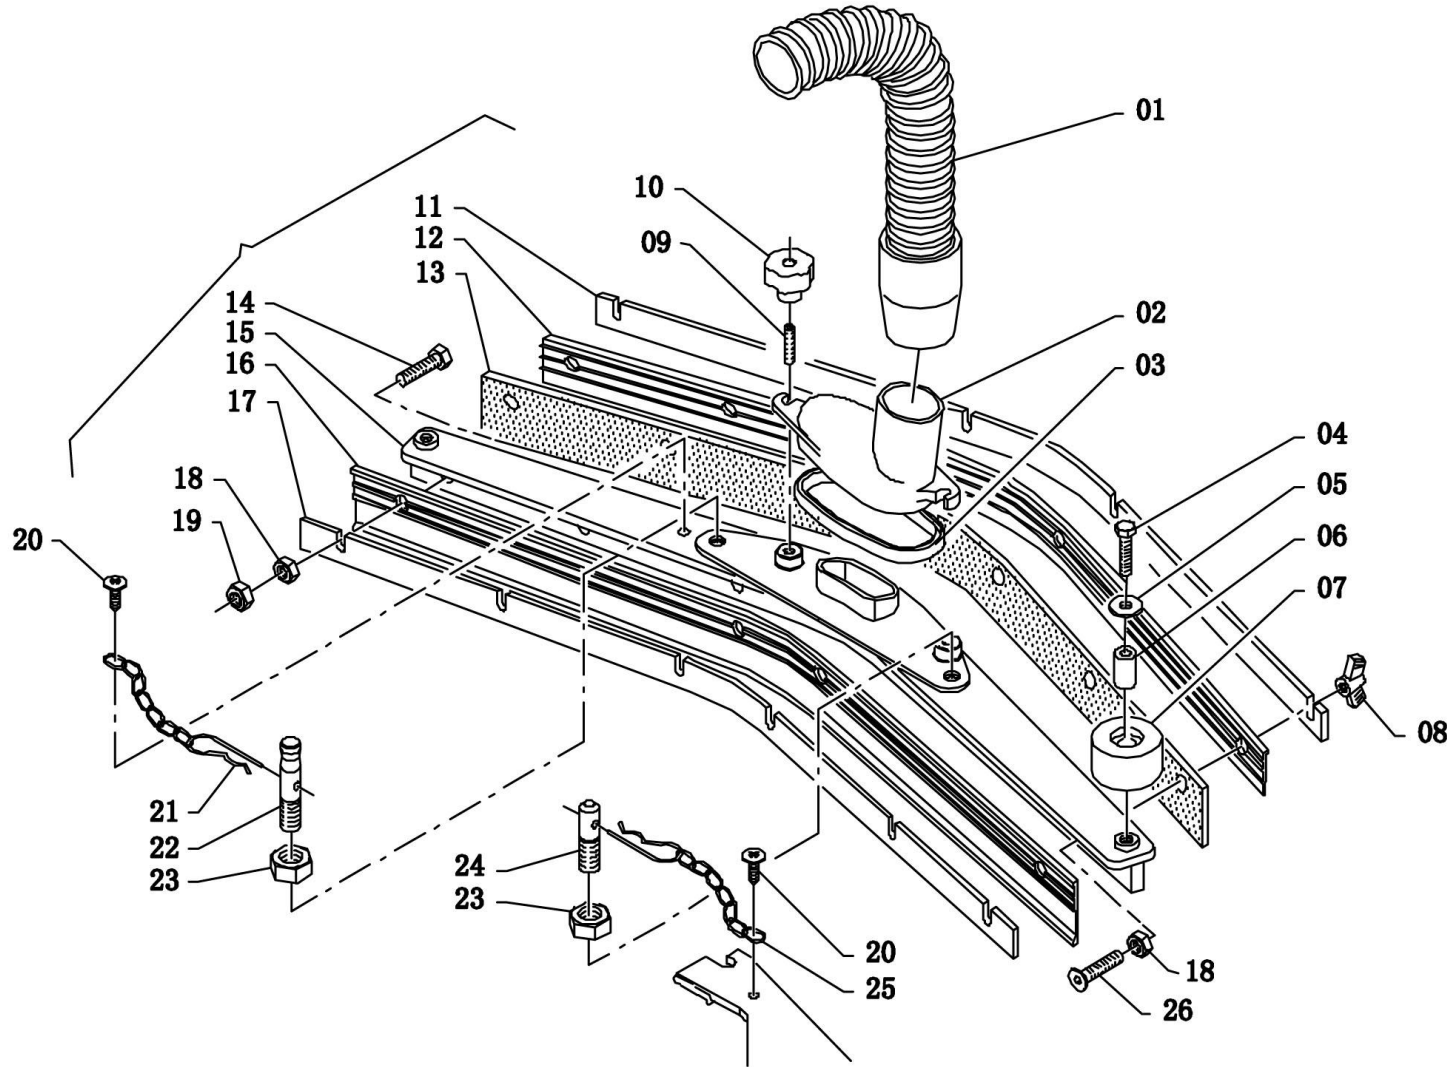


26	GB/T 70.3-2000	screw	6
25	530B-MZ29	chain	2
24	530B-MZ14	stud bolt	1
23	GB/T 6172.1—2000	nut	2
22	530B-MZ15	stud bolt	1
21		pin	2
20	GB/T 845-1985	screw	2
19	GB/T 928-1980	nut	6
18	GB/T 6172.1—2000	nut	10
17	530B-M905	front blade	1
16	530B-P21	front rubber	1
15	530B-AL01	squeegee body	1
14	530B-B15	screw	6
13	530B-P22	central rubber	1
12	530B-P23	rear rubber	1
11	530B-M906	rear blade	1
10	530B-P41	knob	2
9	GB/T 77-2000	screw	2
8	530B-P39	wing nut	6
7	530B-V05	wheel	2
6	530B-BR04	bushing	2
5	GB/T 95-2002	washer	2
4	530B-B15	screw	2
3	530B-P19	gasket	1
2	530B-P18	connector	1
1	530B-P01	suction hose	1

 BZT006

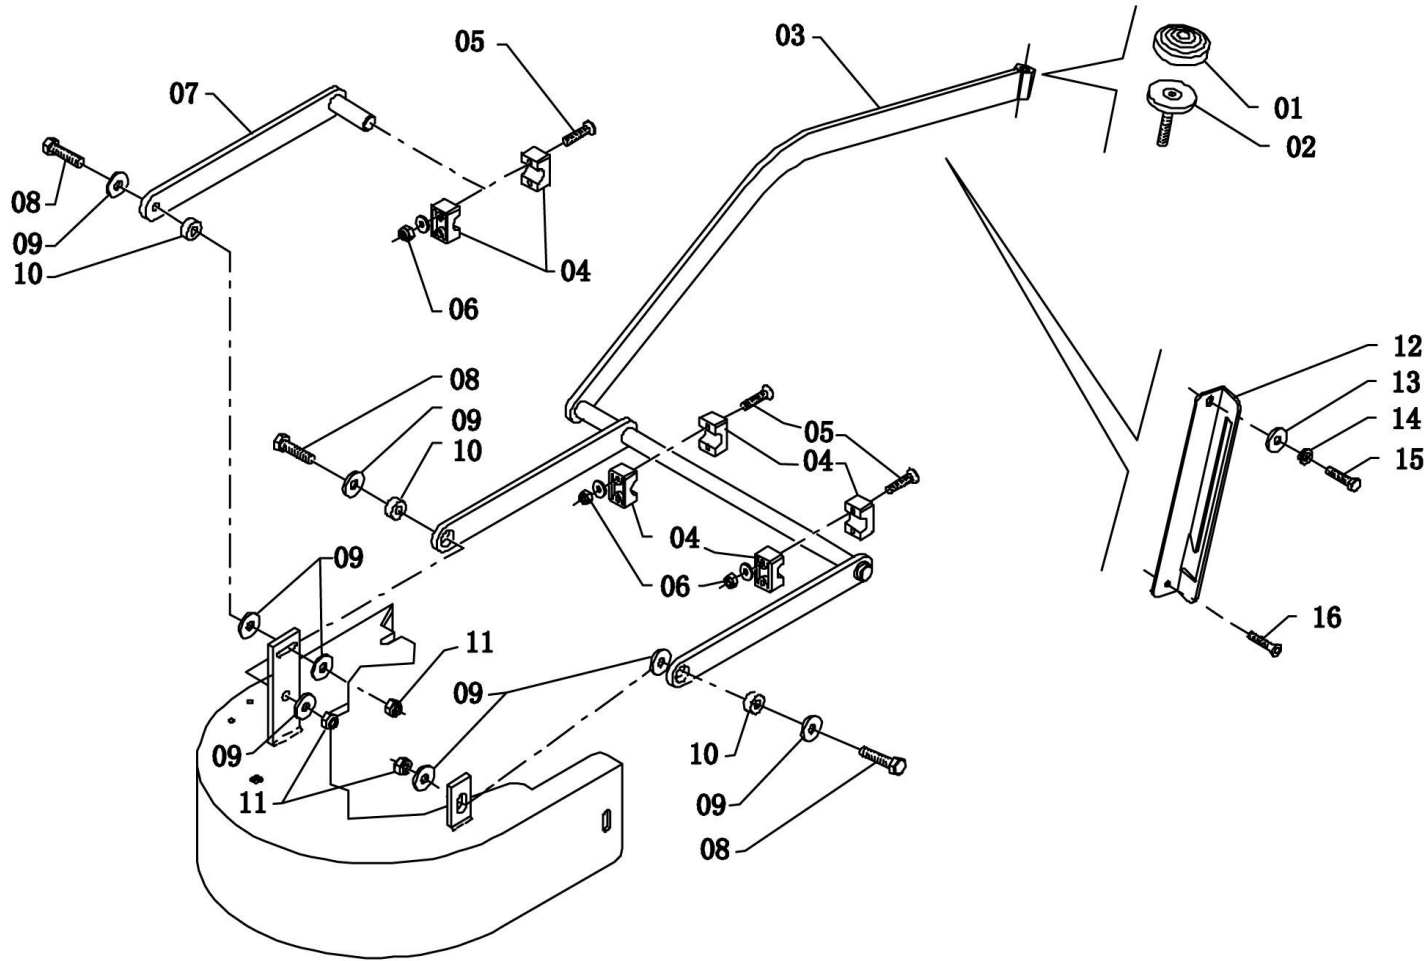

15	GB/T 5781-2000	screw	1
14	GB/T 93-1987	washer	1
13	GB/T 95-2002	washer	1
12	530B-M904	limit slot	1
11	GB/T 928-1980	nut	3
10	530B-BR02	bushing	3
9	GB/T 95-2002	washer	8
8	GB/T 5781-2000	screw	3
7	530B-MZ02	arm	1
6	GB/T 928-1980	nut	6
5	GB/T 819.1-2000	screw	6
4	530B-P28	nylon support	6
3	530B-MZ01	long arm	1
2	530B-MZ18	pedal	1
1	530B-P26	pedal cover	1

 
BZT007

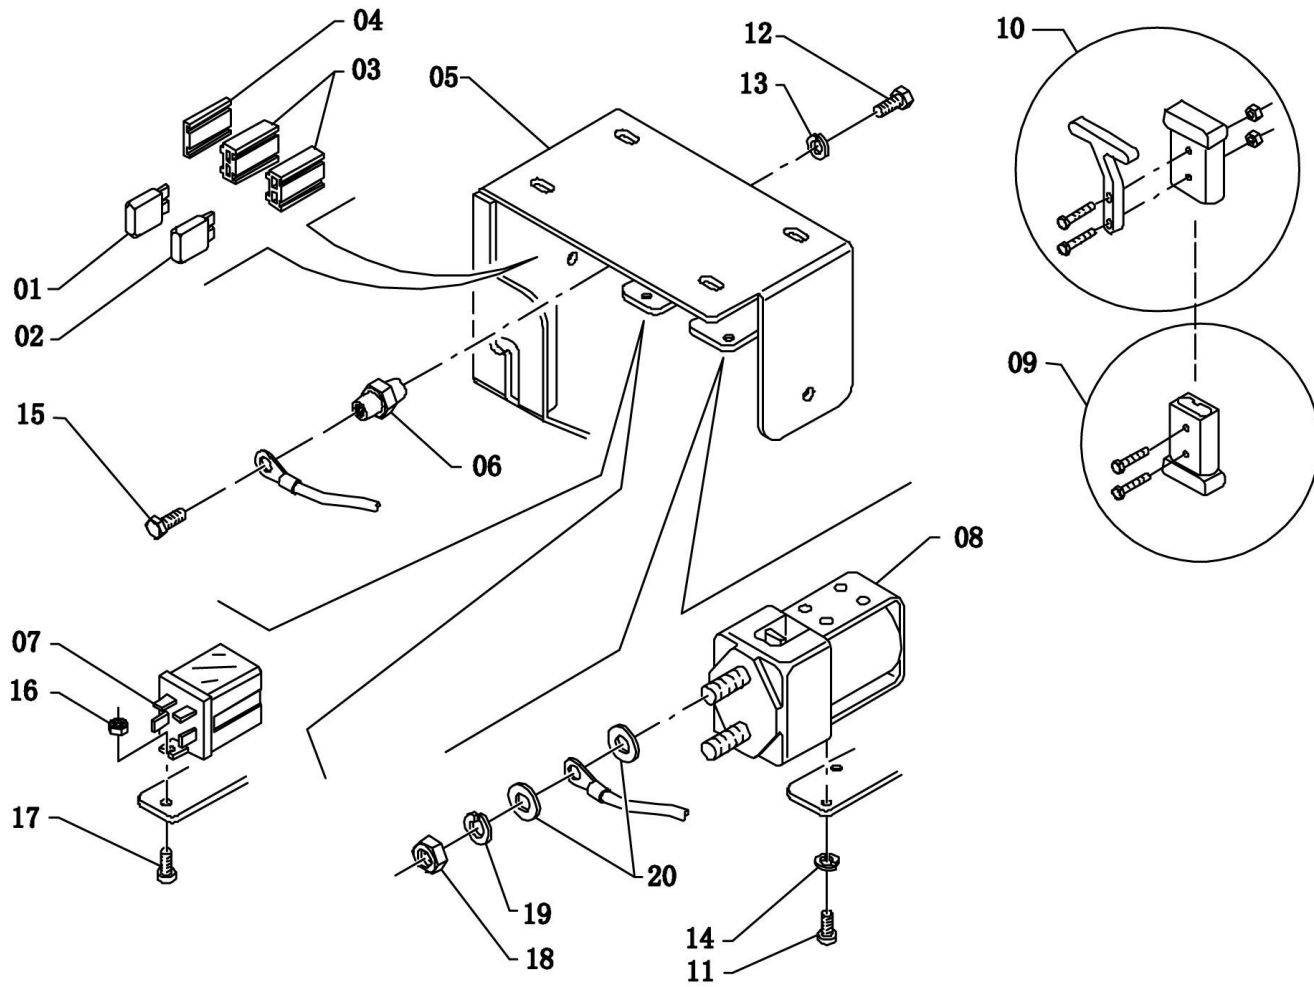

20	GB/T 95-2002	copper washer	4
19	GB/T 93-1987	washer	2
18	GB/T 41-2000	nut	2
17	GB/T 845-1985	screw	1
16	GB/T 928-1980	nut	1
15	GB/T 5781-2000	screw	1
14	GB/T 5781-2000	screw	1
13	GB/T 93-1987	washer	1
12	GB/T 862,1-198	washer	2
11	GB/T 845-1985	screw	2
10	530B-C09	battery cable	1
9	530B-C02	connector	1
8	530B-C06	contactor	1
7	530B-C07	relay	1
6	530B-C08	Insulator	1
5	530B-MZ10	Junction box	1
4	530B-P47	fuse base	1
3	530B-P48	fuse box	2
2	530B-C04	30A fuse	1
1	530B-C03	50A fuse	1




 BZT008

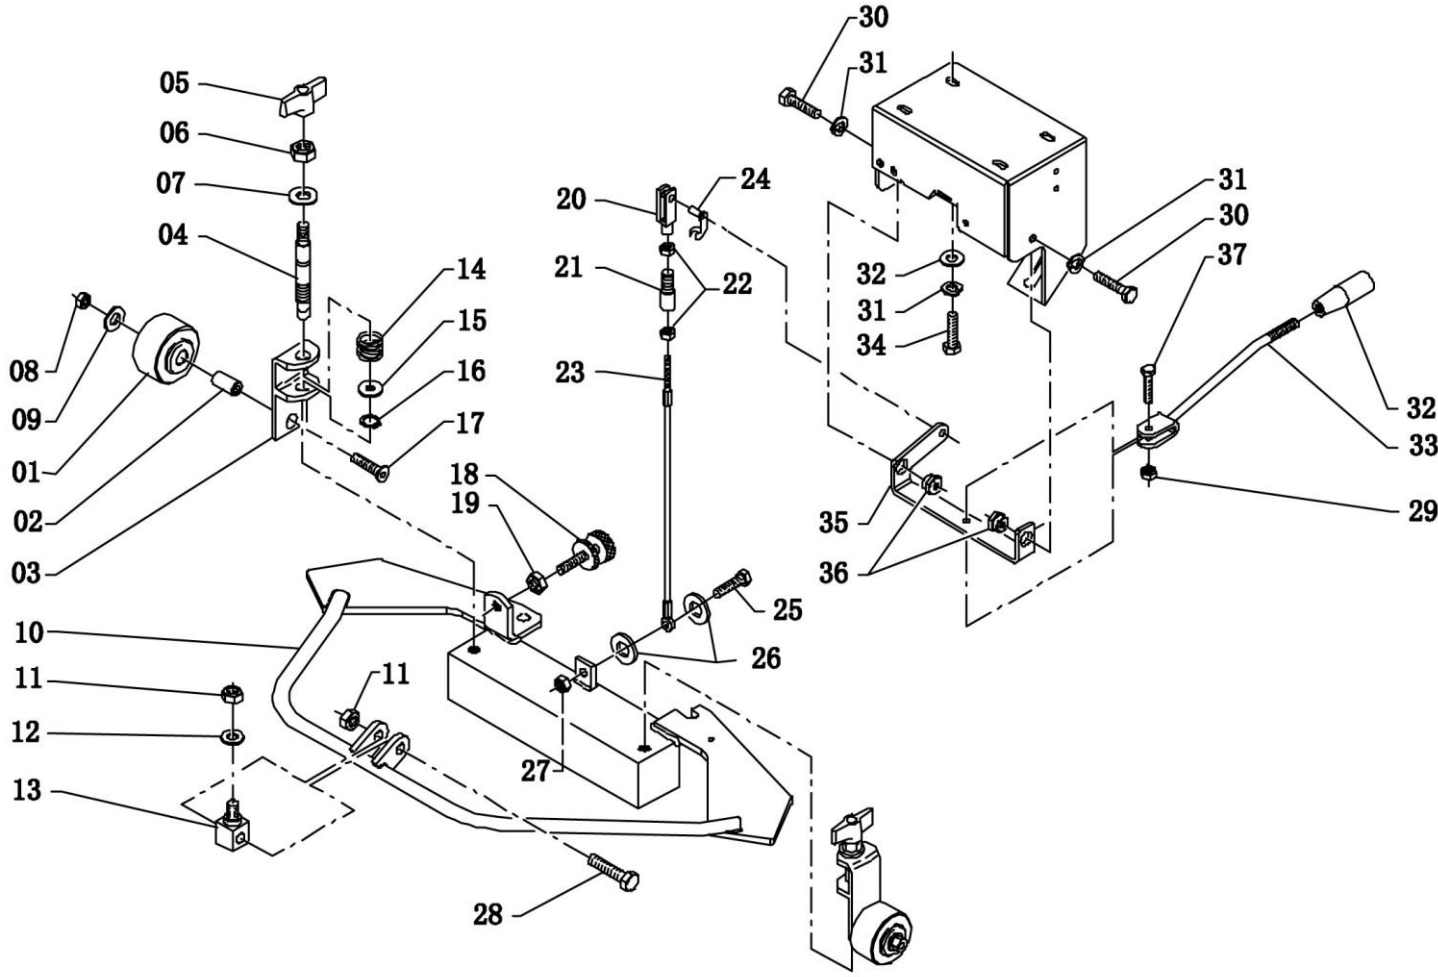




37	GB/T 5781-2000	screw	1
36	530B-BR01	bushing	2
35	530B-MZ11	lever	1
34	GB/T 5781-2000	screw	4
33	530B-MZ12	lever	1
32	530B-P34	knob	1
31	GB/T 95-2002	washer	6
30	GB/T 5781-2000	screw	2
29	GB/T 928-1980	nut	1
28	GB/T 5781-2000	screw	1
27	GB/T 928-1980	nut	1
26	GB/T 95-2002	washer	2
25	GB/T 5781-2000	screw	2
24	530B-MZ26	clip	1
23	530B-L1	steel rope	1
22	GB/T 6172.1-2000	nut	2
21	530B-MZ28	extension tube	1
20	530B-MZ25	fork	1
19	GB/T 6172.1-2000	nut	1
18	530B-MZ07	adjuster	1
17	GB/T 819.1-2000	screw	2
16	GB896-76	ring	2
15	GB/T 95-2002	washer	2
14	530B-MZ27	spring	2
13	530B-MZ13	block	1
12	GB/T 95-2002	washer	1
11	GB/T 928-1980	nut	2
10	530B-M903	support	1
9	GB/T 95-2002	washer	3
8	GB/T 928-1980	nut	2
7	GB/T 95-2002	washer	2
6	GB/T 6172.1-2000	nut	2
5	530B-P40	wing nut	2
4	530B-ST01	adjust shaft	2
3	530B-M907	wheel support	2
2	530B-MZ20	bushing	2
1	530B-W03	wheel	2

 BZ7009

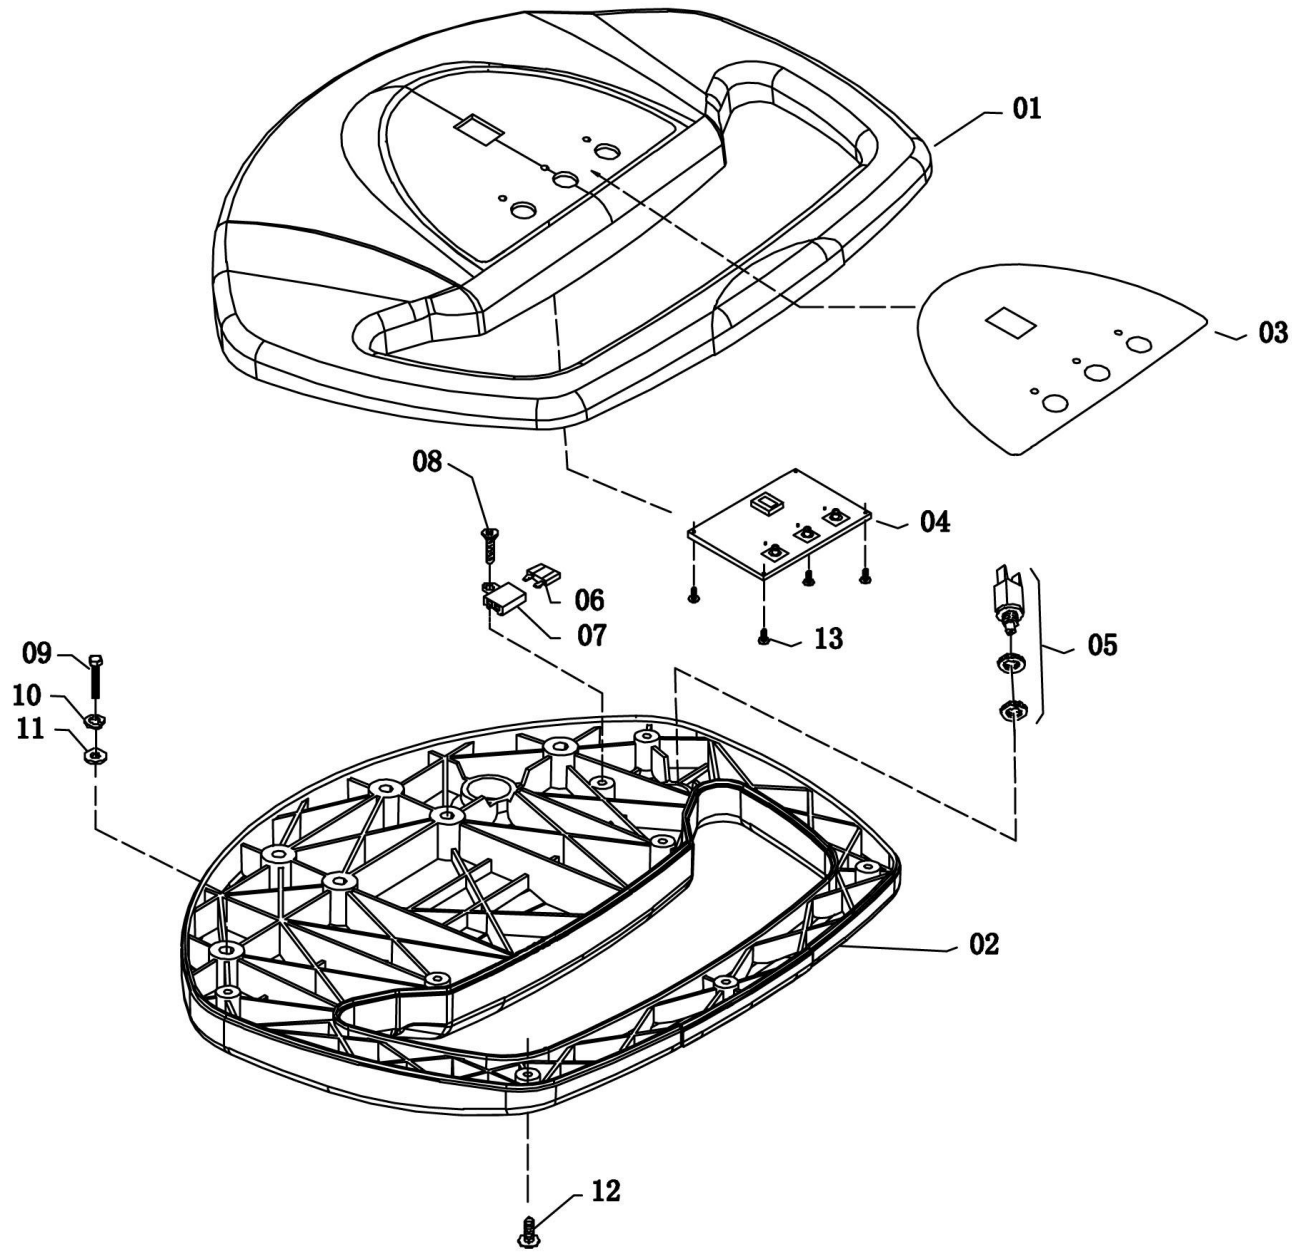


13	GB/T 845-1985	screw	4
12	GB/T 845-1985	screw	7
11	GB/T 95-2002	washer	6
10	GB/T 93-1987	washer	6
9	GB/T 5781-2000	screw	6
8	GB/T 845-1985	screw	1
7	530B-P46	fuse box	1
6	530B-C05	3A fuse	1
5	530B-C14	switch	1
4	530B-C01-B	PCB	1
3	530B-S4	handle label	1
2	530B-P15	handle body	1
1	530B-P04	handle cover	1

   BZT010

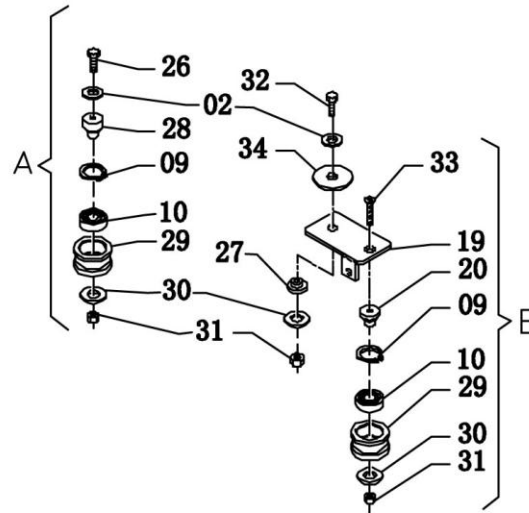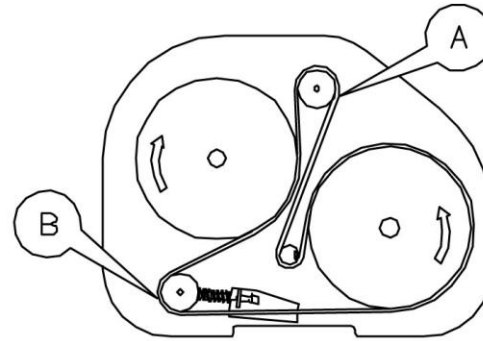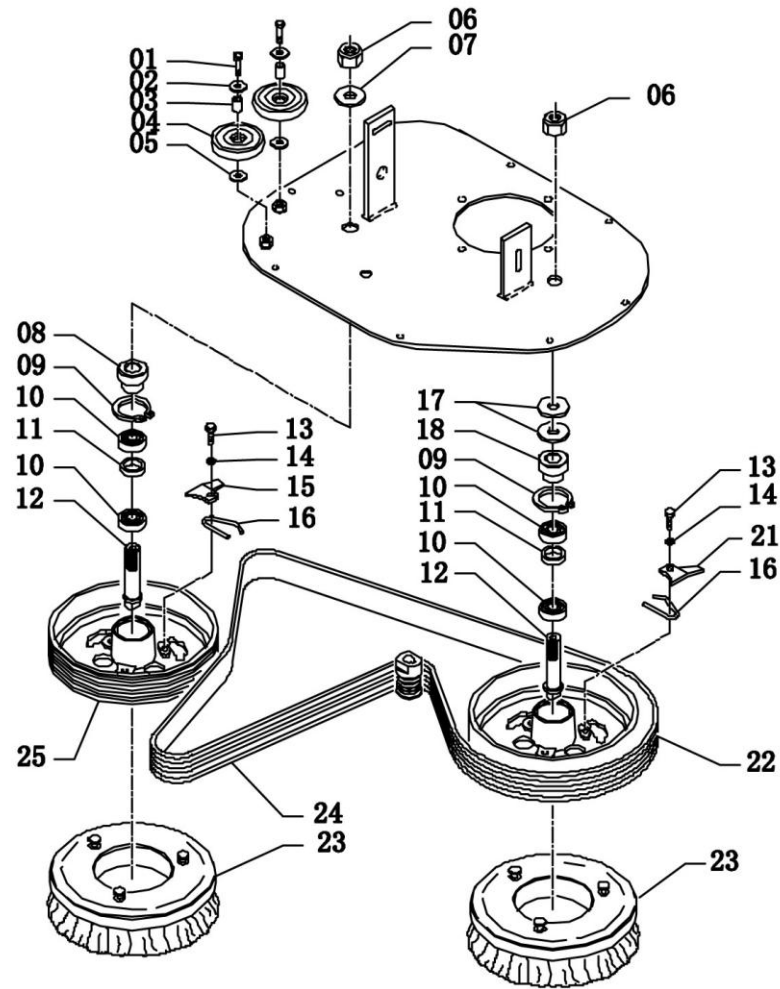


33	GB/T 70.3-2000	screw		
32	GB/T 5781-2000	screw		
31	GB/T 928-1980	nut		
30	GB/T 95-2002	washer	3	
29	520B-MZ30	pulley	2	
28	520B-MZ38	bushing	1	
27	520B-P53	nylon bushing	1	
26	GB/T 5781-2000	screw	1	
25	520B-AL03	pulley	1	
24	520B-P54	belt	1	
23		brush	2	520B
22	520B-AL04	pulley	1	
21	520B -MZ35	left stopper	1	
20	520B-MZ39	spacer	1	
19	520B-M803	arm	1	
18	520B-MZ33	spacer	1	
17	GN1972-92	washer	2	520B
16	520B-MZ37	spring	2	
15	520B-MZ36	right stopper	1	
14	GB/T 93-1987	washer	2	
13	GB/T 5781-2000	screw	2	
12	520B-MZ28	shaft	2	
11	520B-MZ32	spacer	2	
10	GB/T 276	bearing	6	
9	GB/T 8931-1986	ring	4	
8	520B-MZ34	spacer	1	
7	GB/T 95-2002	washer	2	
6	GB/T 41-2000	nut	2	
5	GB/T 95-2002	washer	2	
4	530B-W04	wheel	2	
3	530B-BR03	bushing	2	
2	GB/T 95-2002	washer	5	
1	GB/T 5781-200C	screw	2	

 BZ7011

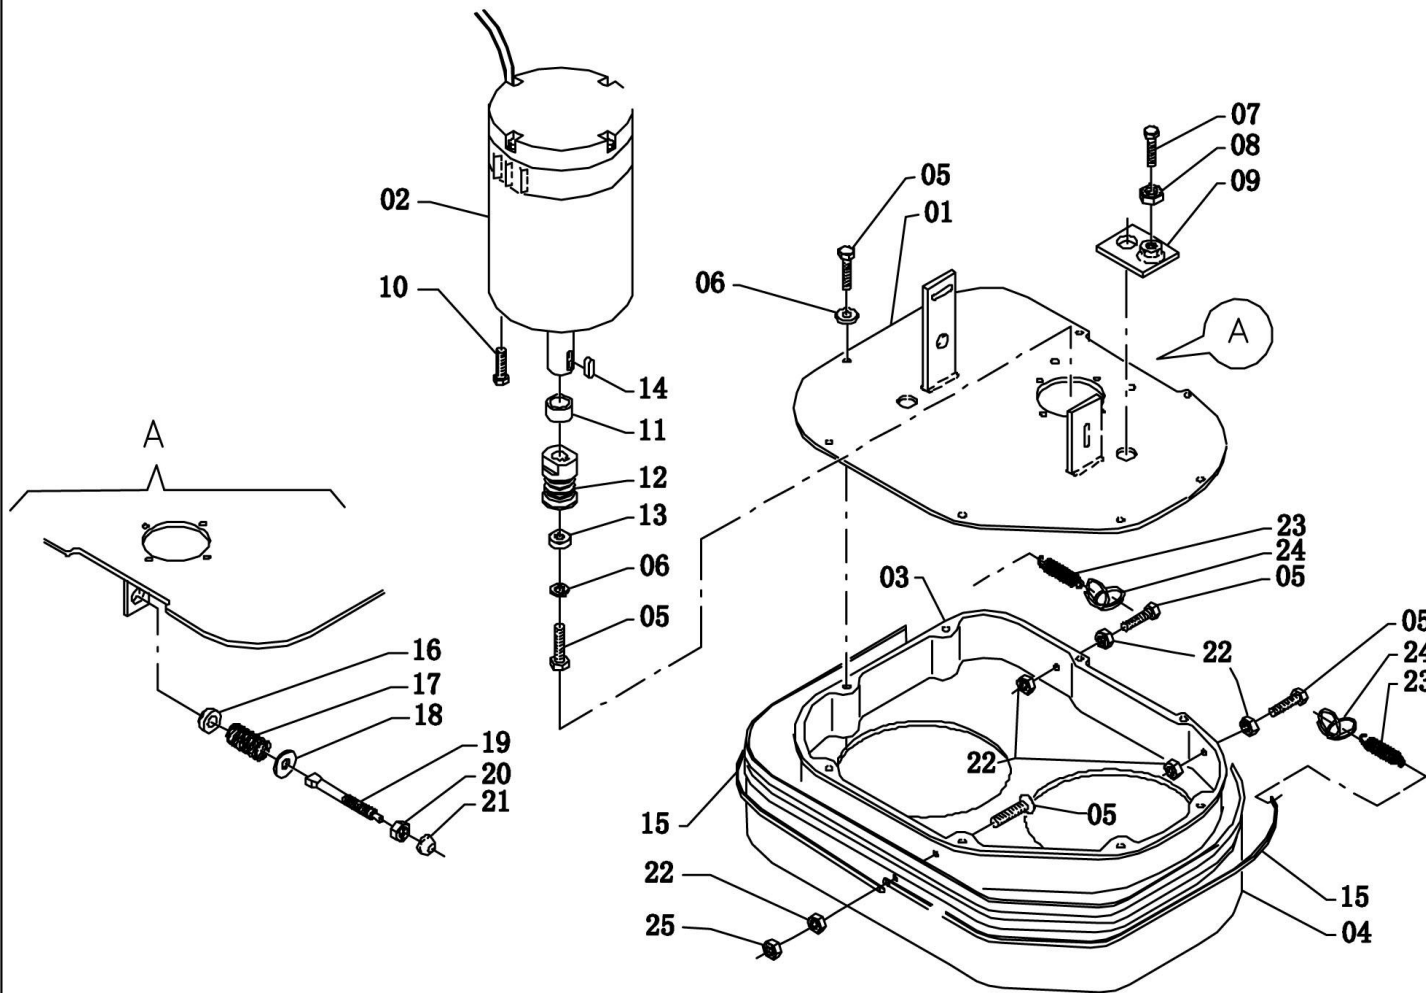

25	GB/T 928-1980	nut	1
24	530B-MZ22	ring	2
23	530B-MZ23	spring	2
22	GB/T 6172.1-2000	nut	5
21	520B-MZ41	bushing	1
20	GB/T 41-2000	nut	2
19	520B-MZ40	adjust rod	1
18	GB/T 95-2002	washer	1
17	520B-MZ42	spring	1
16	520B-P52	support	1
15	530B-ST05	stalness blade	2
14	GB1096—2003	key	1
13	520B-MZ43	spacer	1
12	520B-MZ29	pulley	1
11	520B-MZ31	spacer	1
10	GB/T 5781-2000	screw	4
9	520B-MZ2	adjust plate	1
8	GB/T 6172.1-2000	nut	1
7	GB/T 5781-2000	screw	1
6	GB/T 93-1987	washer	9
5	GB/T 5781-2000	screw	16
4	530B-P03	splash guard	1
3	520B-M801	Motor base	1
2	520B-E01	brush motor	1
1	520B-M802	motor support	1

 
BZT012  
GBZ-520B

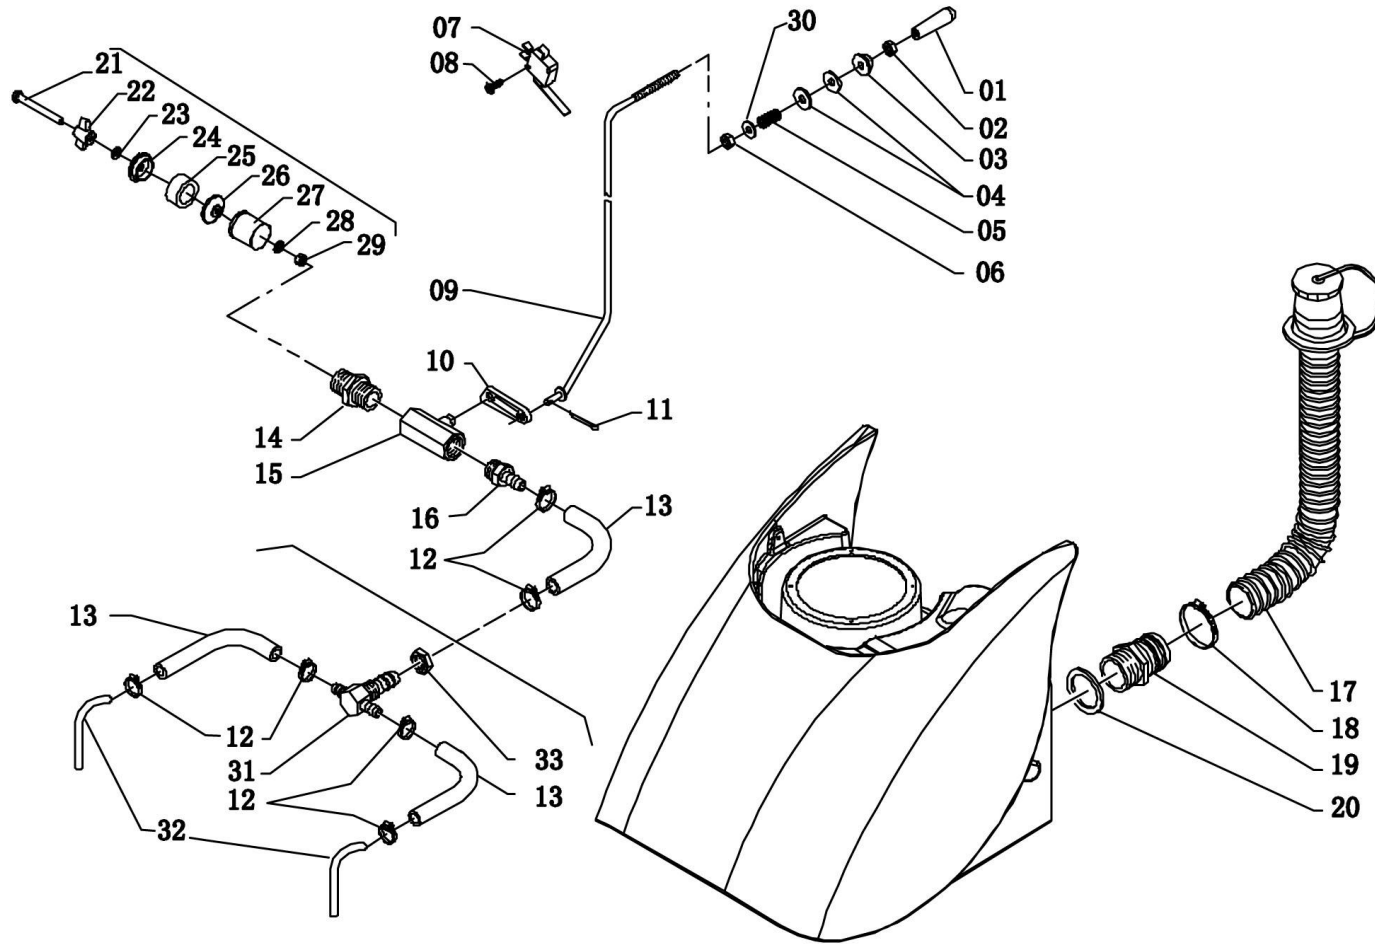

33	GB/T 41-2000	nut	1
32		elbow	2
31		T pipe	1
30	GB/T 95-2002	washer	1
29	GB/T 928-1980	nut	1
28	GB/T 95-2002	washer	1
27	530B-ST06	filter	1
26	530B-P08	filter support	1
25	530B-P07	rubber ring	1
24	530B-P06	plug	1
23	GB/T 95-2002	washer	1
22	530B-P51	wing nut	1
21		screw	1
20	530B-P37	gasket	1
19	530B-P36	connector	1
18		clamp	1
17	530B-P02	exhaust pipe	2
16	530B-BR07	connector	1
15	530B-BR08	valve	1
14	530B-BR06	connector	1
13	530B-T6	hose	1
12		clamp	3
11	GB/T 91-2000	pin	6
10	530B-P20	valve lever	1
9	530B-MZ06	rod	1
8	GB/T 845-1985	screw	1
7	530B-C15	mlcroswlch	2
6	GB/T 6177.1-2000	nut	1
5	530B-MZ24	spring	1
4	530B-P43	nylon washer	1
3	530B-P17	plastic washer	2
2	GB/T 41-2000	nut	1
1	530B-P35	knob	1

BZT013

 GBZ-430B

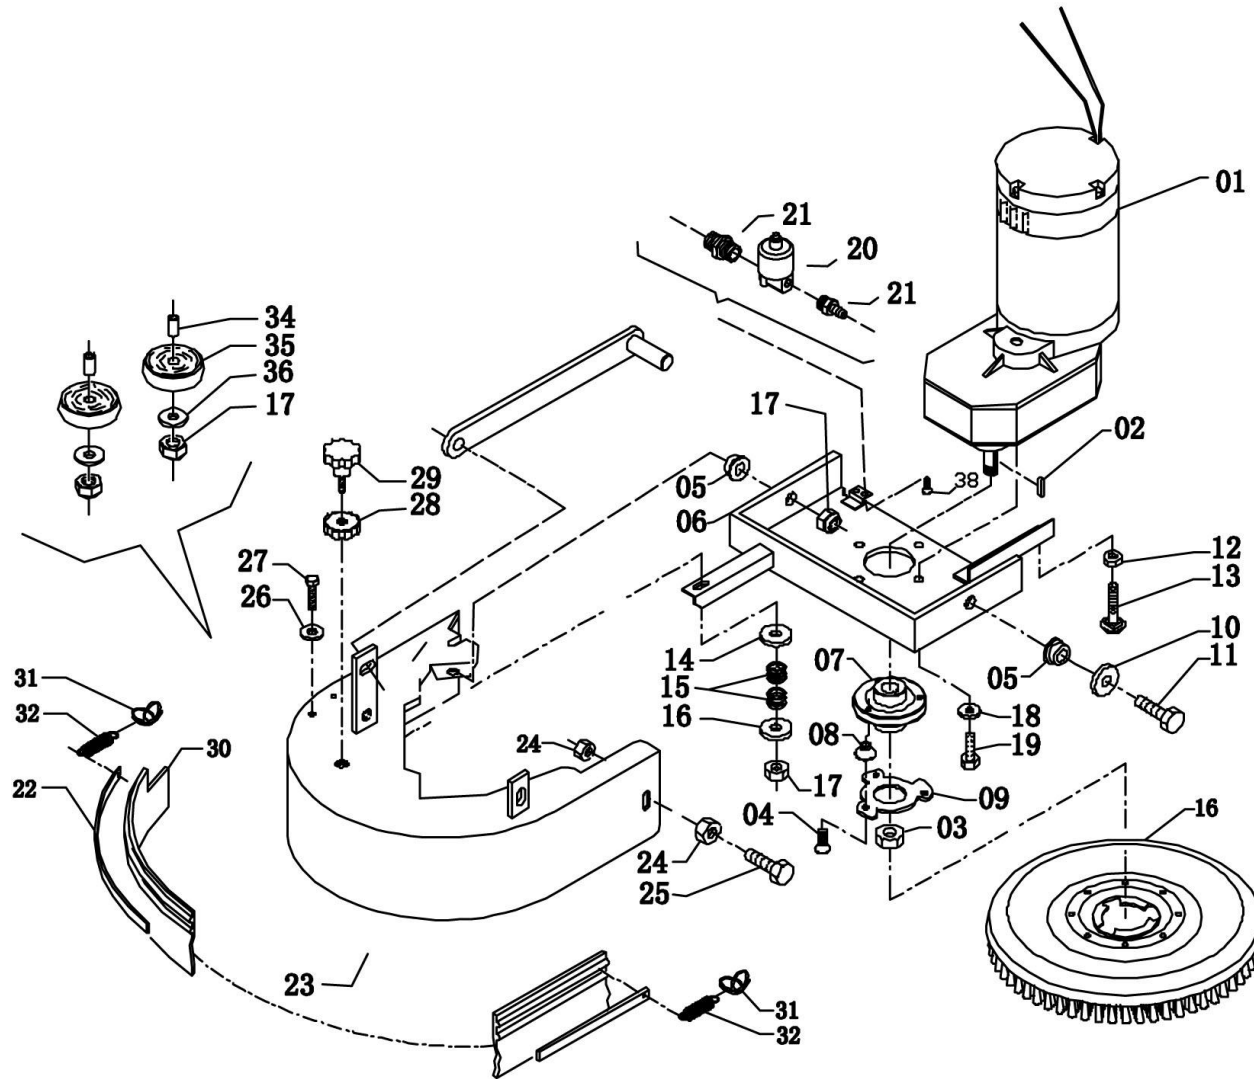

35	GB/T 95-2002	washer	2
34	530B-W04	wheel	2
33	530B-BR03	bushing	2
32	530B-MZ23	spring	2
31	530B-MZ22	ring	2
30	430B-P03	splash guard	1
29	530B-P38	knob	1
28	530B-P27	handwheel	1
27	GB/T 5781-2000	screw	2
26	GB/T 95-2002	washer	2
25	GB/T 5781-2000	screw	2
24	GB/T 6177.1-2000	nut	4
23	430B-M801	support	1
22	530B-ST05	stainless blade	1
21	530B-BR09	connector	2
20	530B-C16	solenoid valve	1
19	GB/T 5781-2000	screw	4
18	GB/T 95-2002	washer	4
17	GB/T 928-1980	nut	5
16	430B-T6	brush	1
15	530B-MZ24	spring	2
14	GB/T 95-2002	washer	15
13	GB/T 12-1988	screw	1
12	GB/T 41-2000	nut	1
11	GB/T 5781-2000	screw	2
10	GB/T 95-2002	washer	2
9	530B-MZ04	flange	1
8	530B-MZ05	spacer	3
7	530B-MZ03	flywheel	1
6	530B-M901	motor base	1
5	530B-BR05	bushing	2
4	GB/T 70.3-2000	screw	3
3	GB6170-2000	nut	1
2	GB/T 1096-2003	key	1
1	530B-E01-1	brush motor	1